




# Canon Powershot A70 Speaker Replacement

Written By: Laura Greek

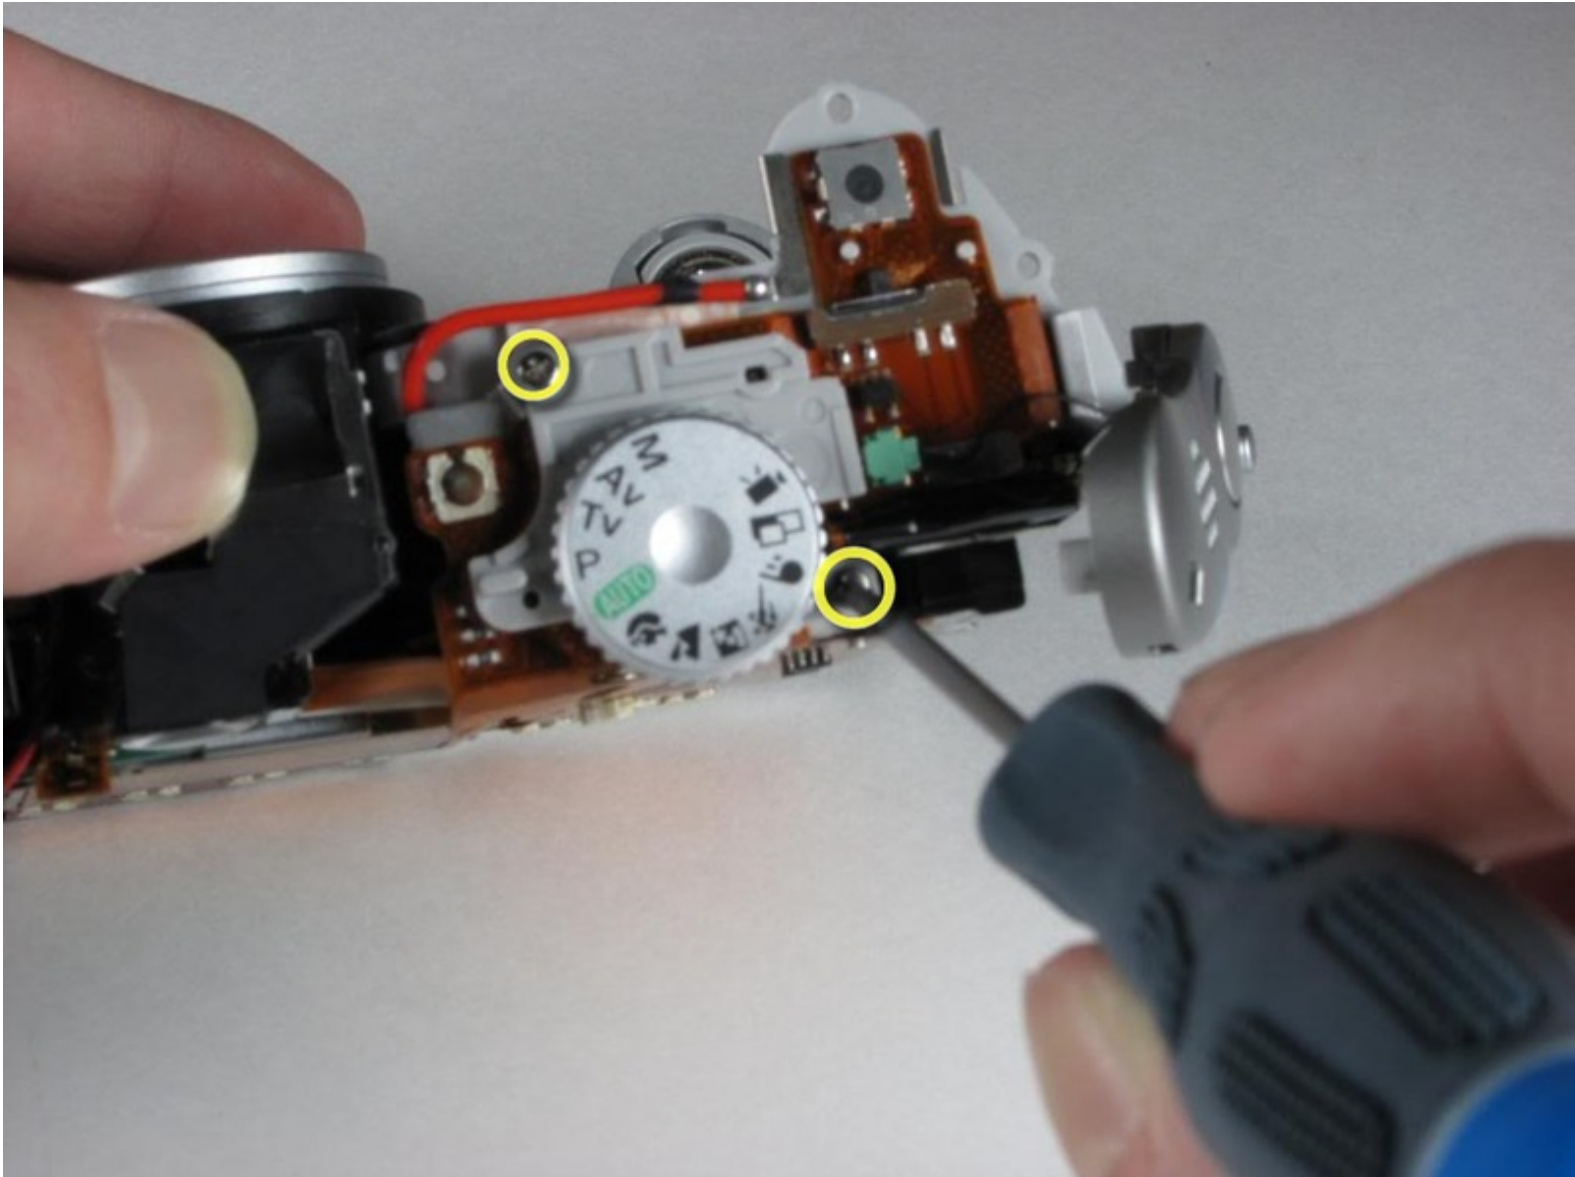

## INTRODUCTION

This guide will help Canon Powershot A70 owners replace the speakers, if the camera is not giving off sound.

---



### TOOLS:

- [iFixit Opening Tools](#) (1)
  - [Phillips #00 Screwdriver](#) (1)
  - [Tweezers](#) (1)
-

## Step 1 — Shutter/Speaker Panel



- Open the battery compartment and remove the batteries.
- Remove the two screws that are deep in the battery compartment.


## Step 2



- Open the CF compartment and remove the top screw
  - The small panel that the shutter button and zoom are one will come free
- ⚠ Be careful! There are two small wires connecting the speaker to the body of the camera. Do not remove these or break them off.



## Step 3 — Rear Exterior Panel

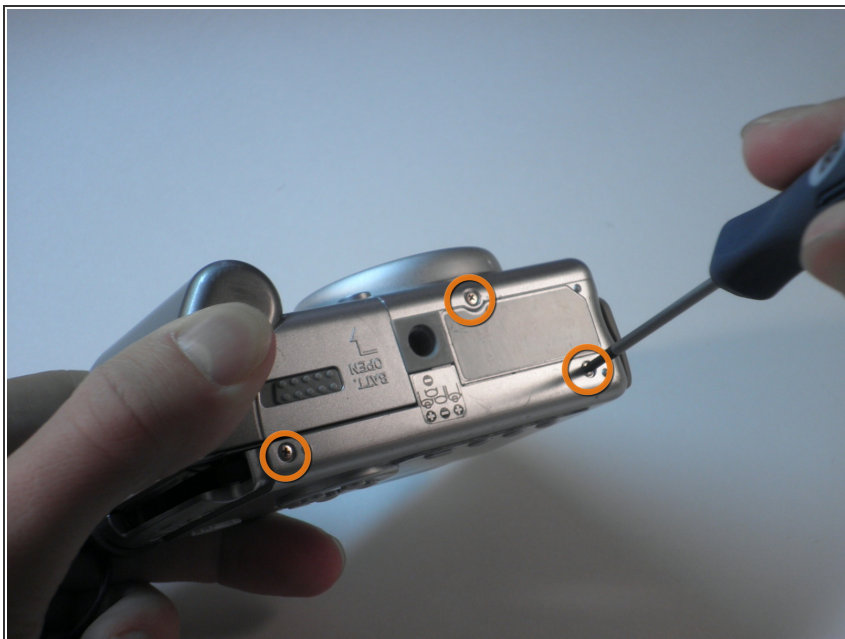

- Remove Wrist strap
- Unscrew the three small screws on the bottom

## Step 4



- Remove the screw in the CF compartment.

## Step 5



- Open rubber Digital AV Out compartment flap
- Pry up the battery with the IFIXIT opening tool
- Carefully pull out the battery with two fingers
- Unscrew the two screws that are now visible


## Step 6



- Start at the bottom, and carefully pull the casing off.
- The casing will pivot at the top
  - There are three catches that hold the back casing to the body
- ⓘ You may have to pull with some force. The rear panel will make a snapping noise when it separates from the body.




## Step 7

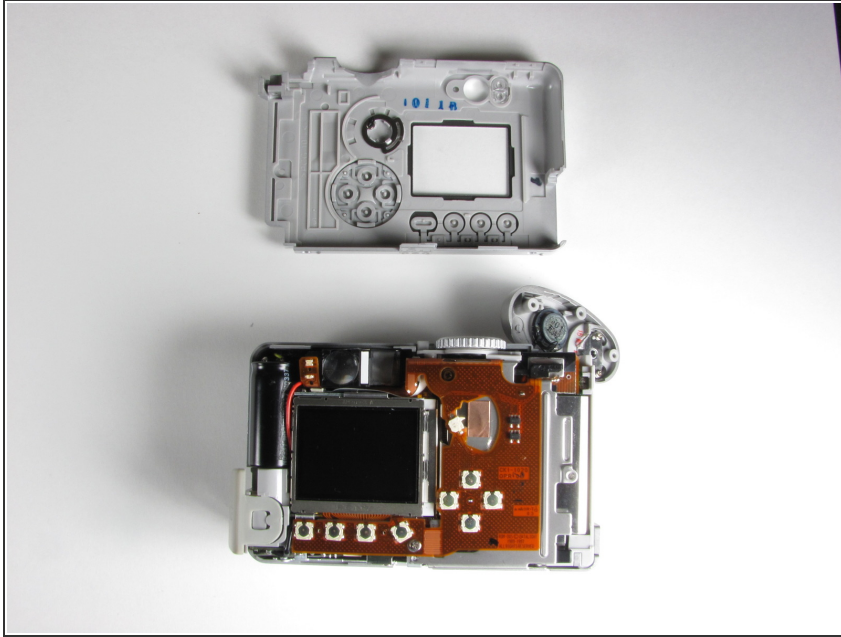

- The interior of the camera should look like this

## Step 8 — Canon Powershot A70 Front Exterior Panel Disassembly

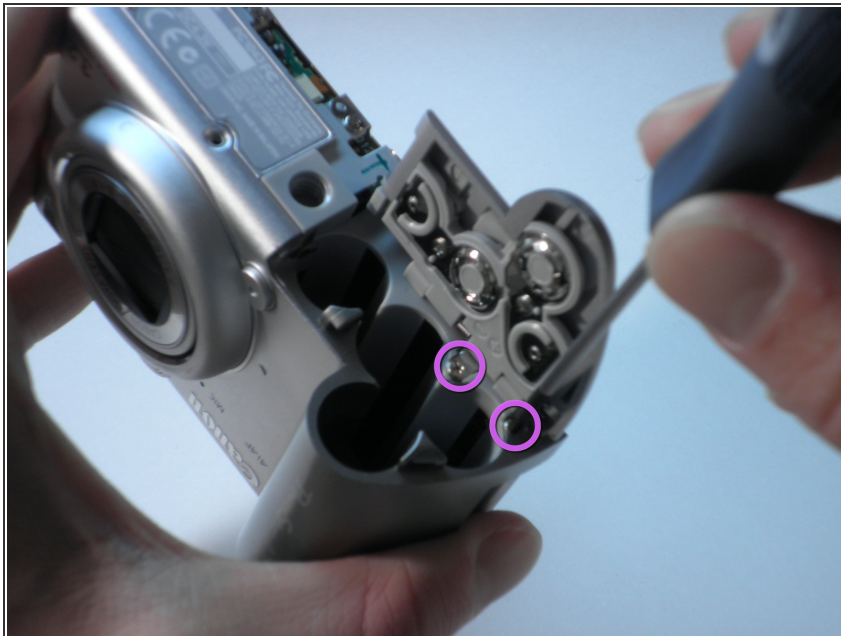


- Remove the two screws at the top of the battery compartment

## Step 9



- With your right thumb, pull back on the tab while using your left hand to pull the face of the camera away from the body



## Step 10 — Speakers

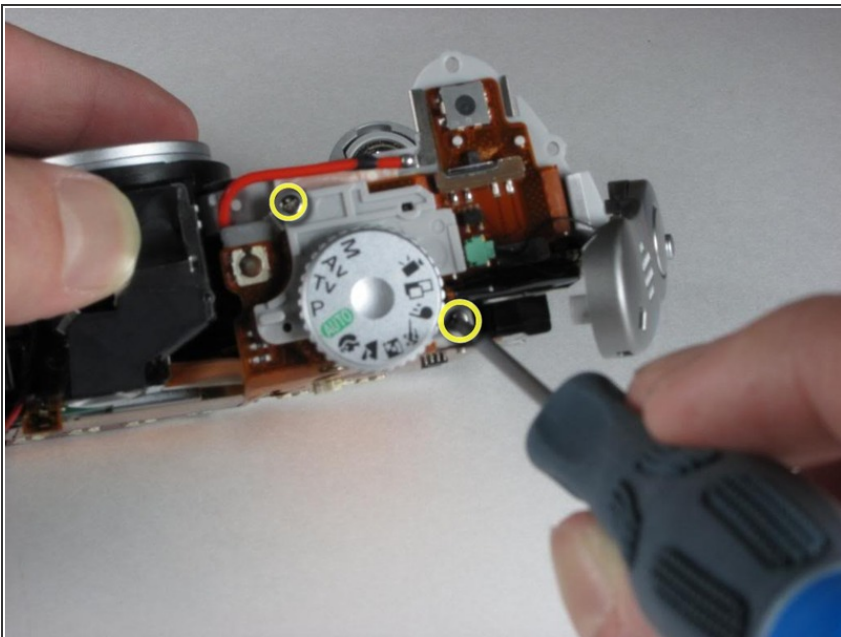

- Remove the two clearly visible screws from the control dial
- The dial should come off easily




## Step 11

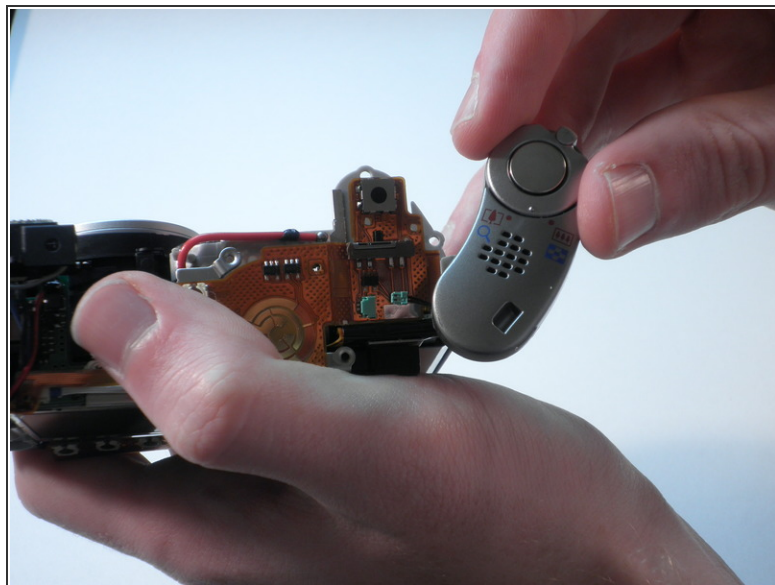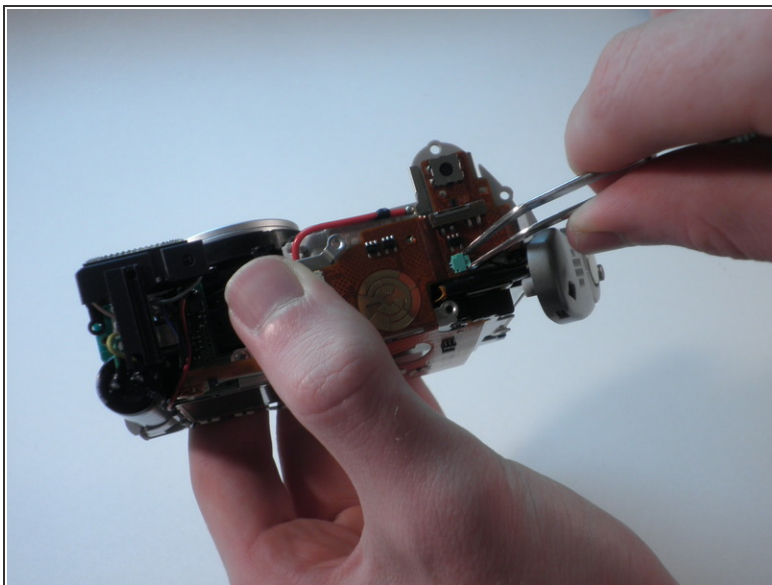

- You should be able to see the two small wires connecting the speaker to a small green plug
  - With tweezers, carefully unplug the wires from the plug. The wire should slide straight out
- Carefully replace the broken speaker/shutter panel with a new one

## Step 12

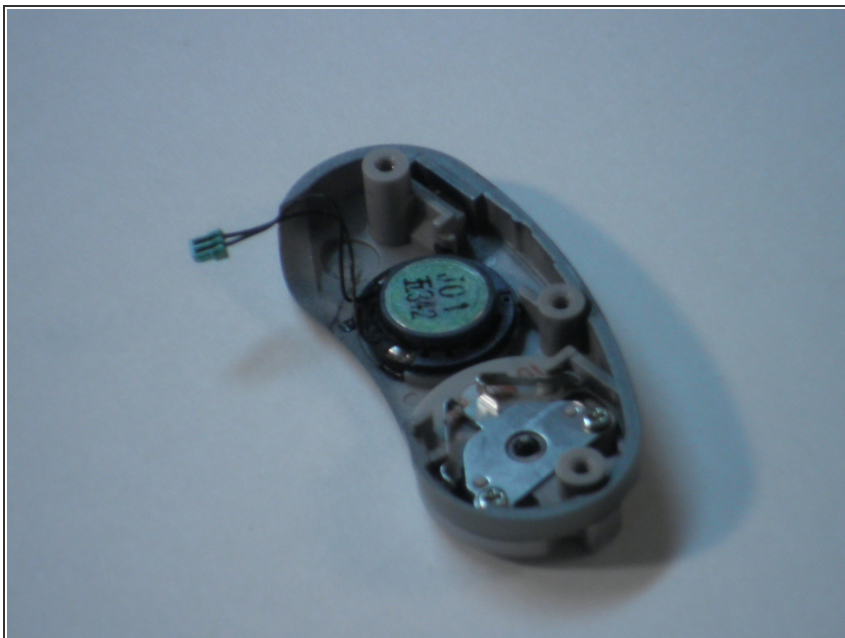

- The removed panel should look like this

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-09-24 08:45:47 PM.